
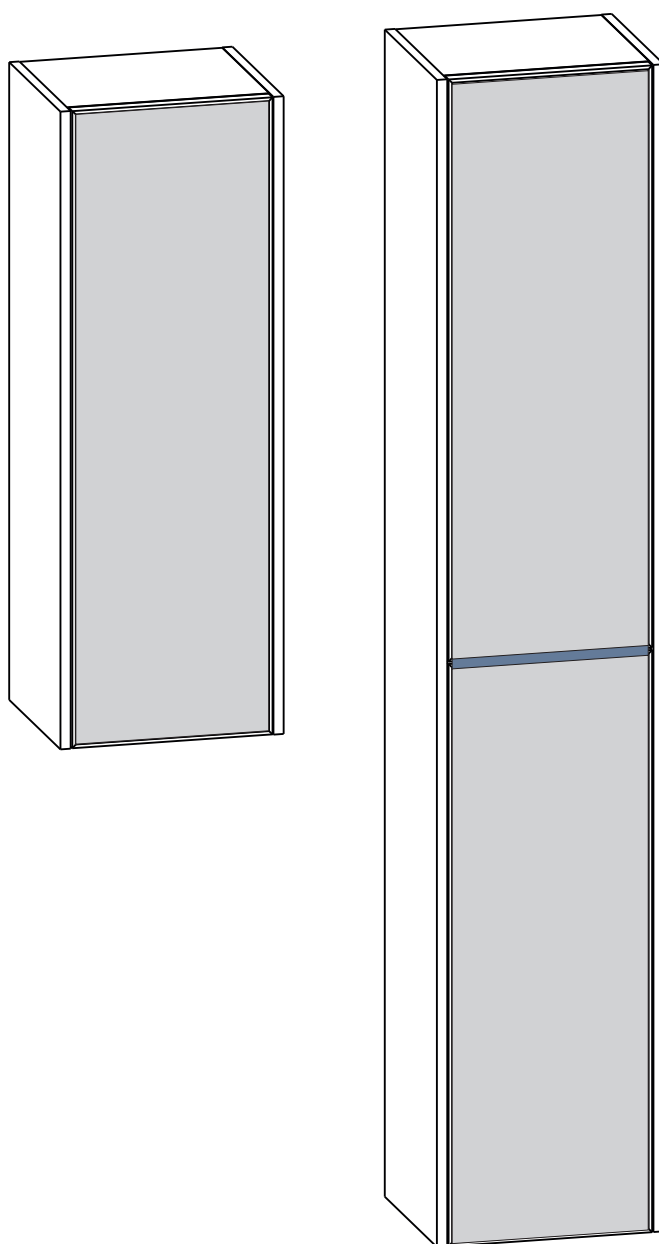



- HR UPUTE ZA MONTAŽU
- SLO NAVODILA ZA NAMESTITEV
- DE MONTAGEANLEITUNG
- ENG MOUNTING INSTRUCTIONS


MYRA


KOLONA
STRANSKA OMARICA
HOCHSCHRÄNKE
TALL CABINET





1  **4x**
Ø 8 mm




2  **4x**
Ø 5x50 mm

3  **2x**

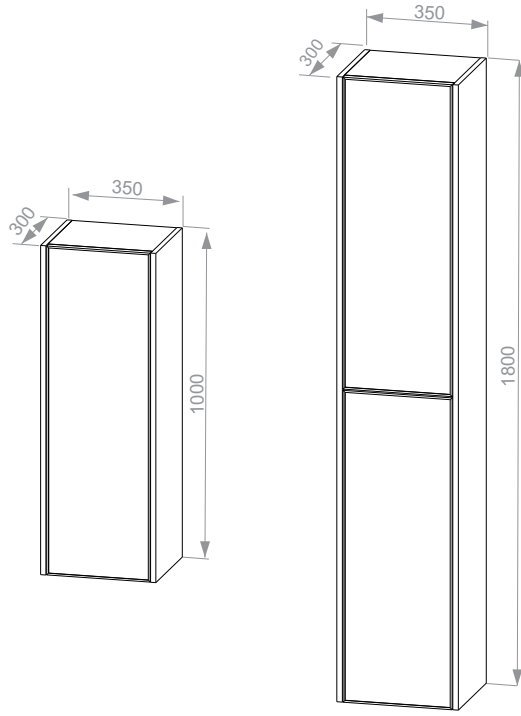

1

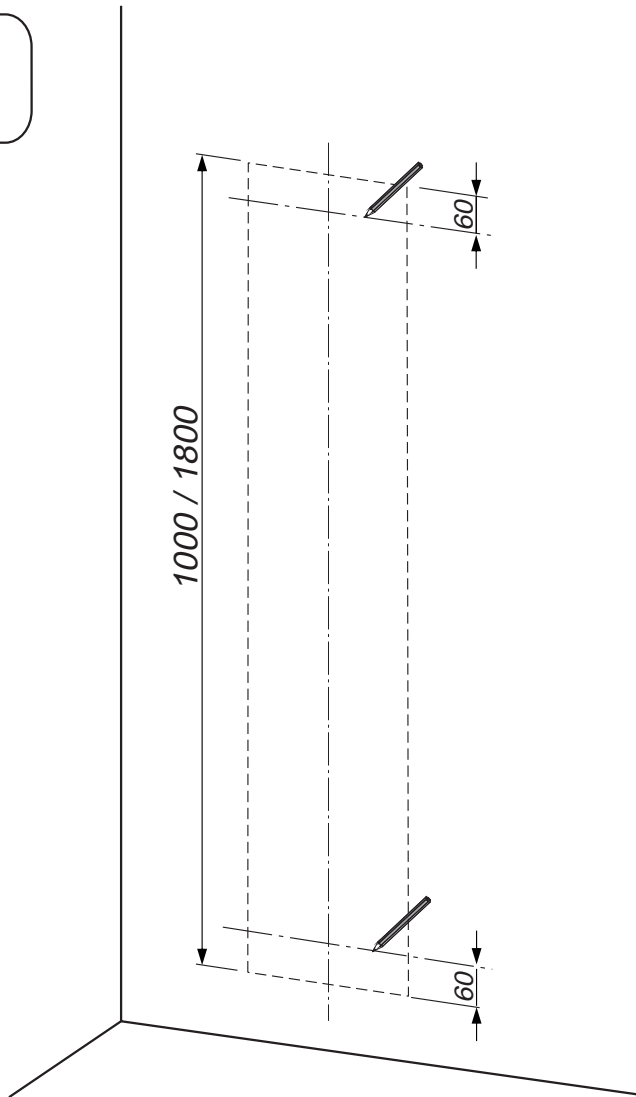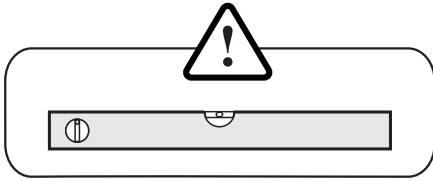

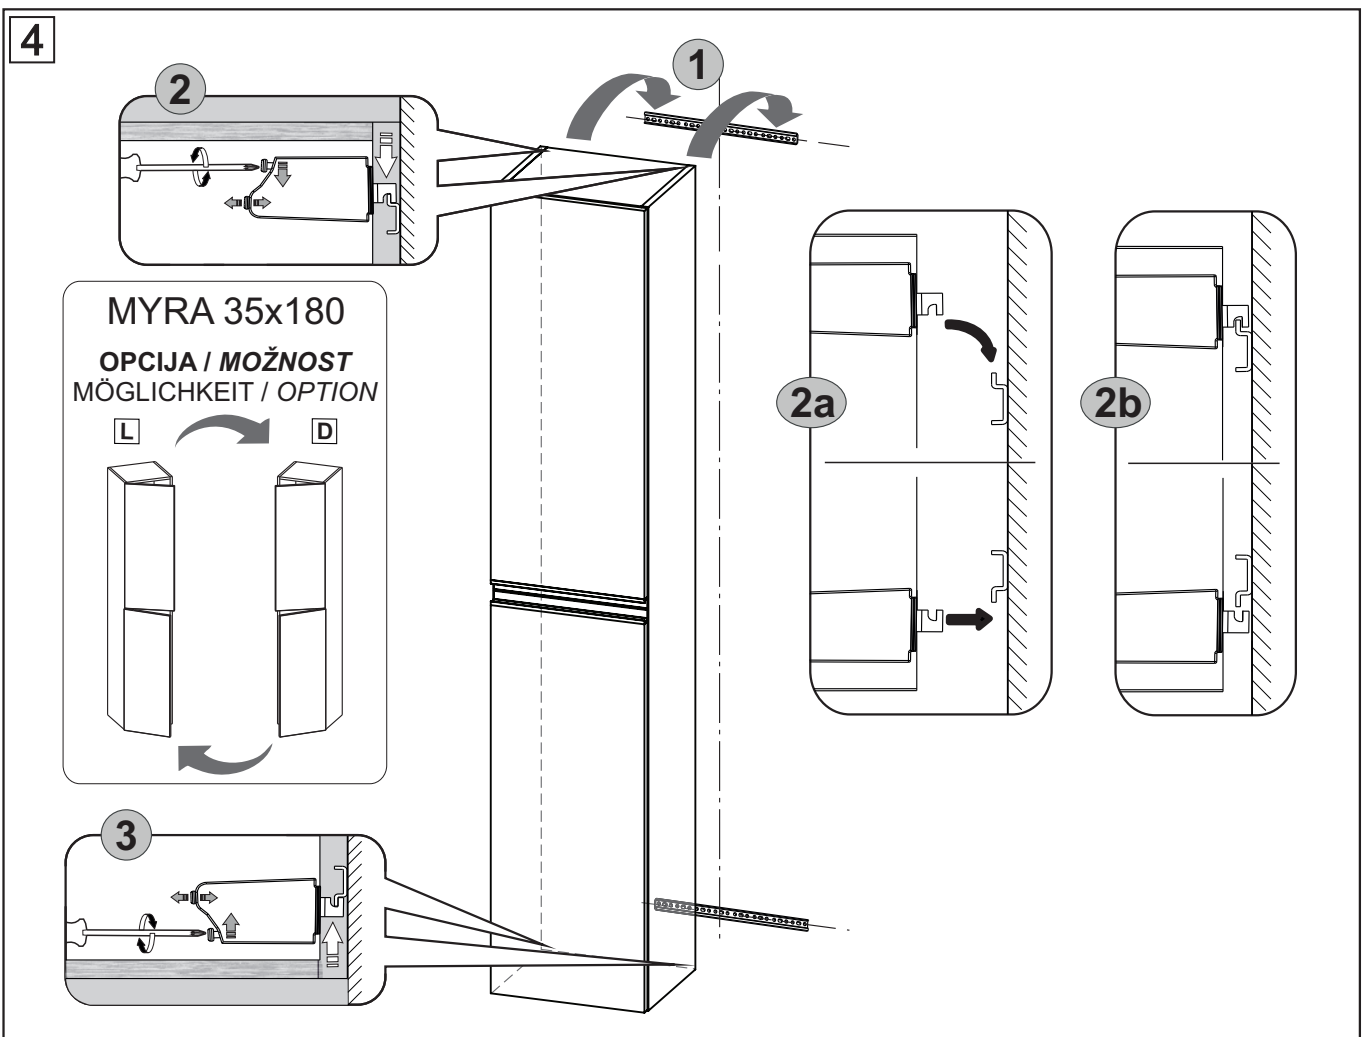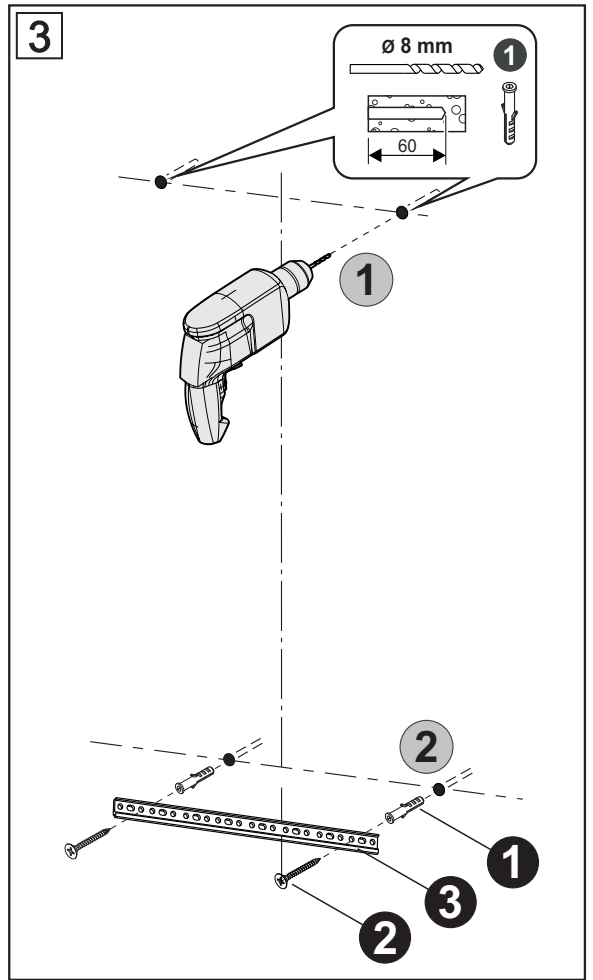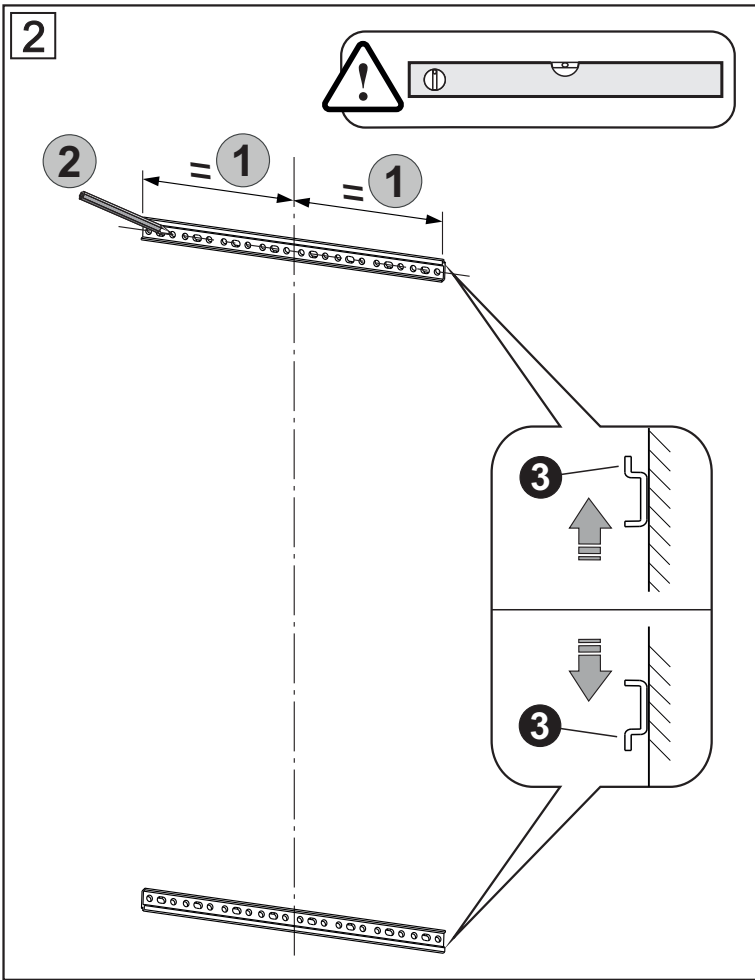

AQUAESTIL